 
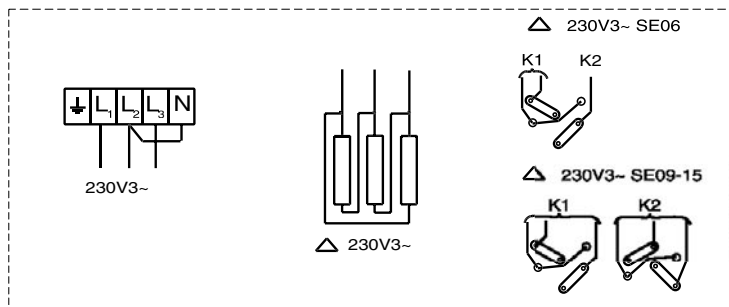 
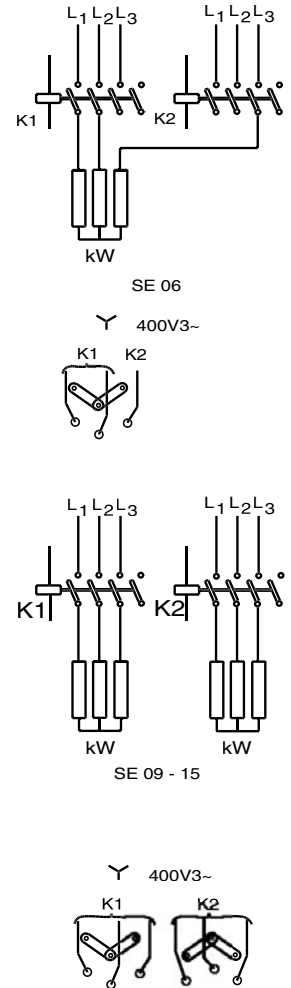 
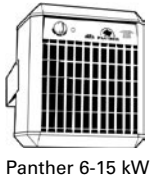 


Wiring diagrams Panther 6-15 kW

Manual 3-stage fan speed regulation and output limitation in stages 0-1/2-1/1 via control panel PP15.


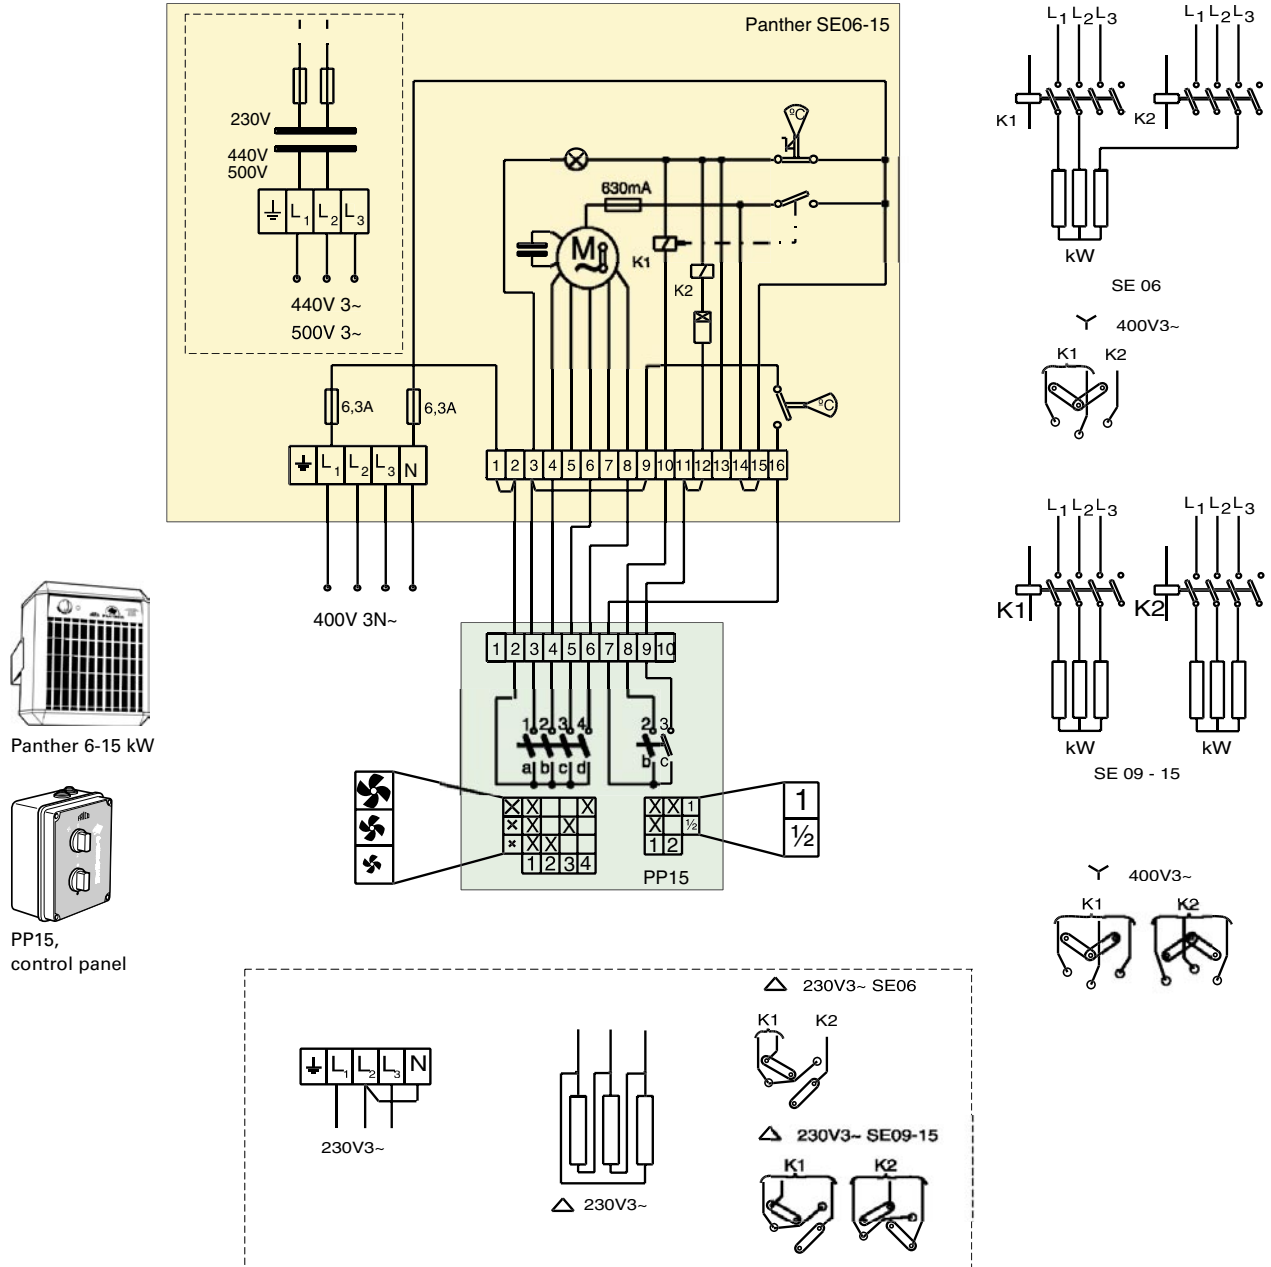


Wiring diagrams Panther 6-15 kW

Wiring of accessories to Panther 6-15.




Panther 6-15 kW

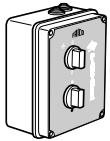
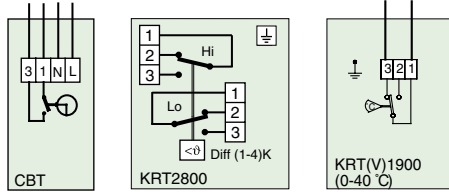


PP15, control panel



Without accessories

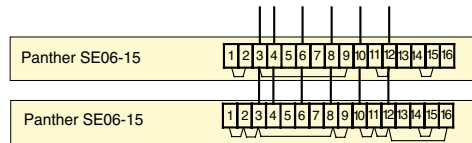




Full fan speed
Max. heat output

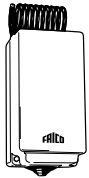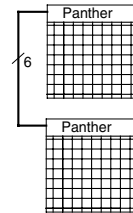




KRT1900, capillary tube thermostat

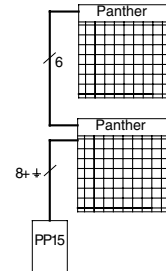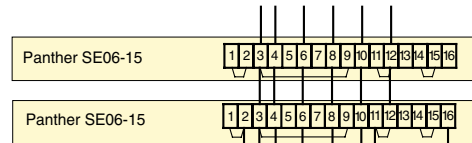

 KRT2800, 2-stage capillary tube thermostat

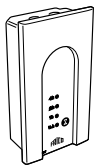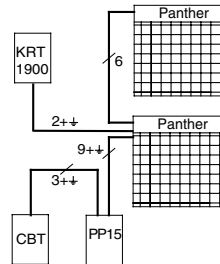

CBT, electronic time switch

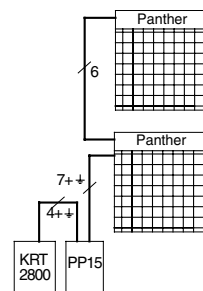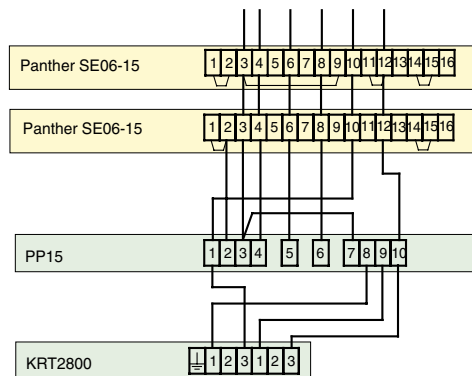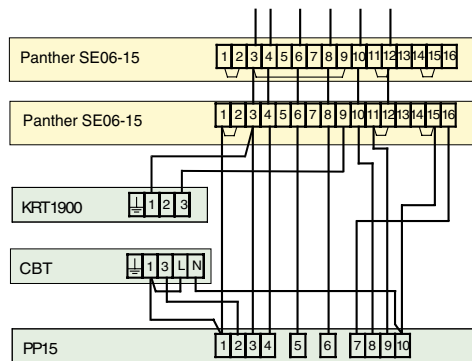


Fan Heater Panther

Wiring diagrams Panther 20 kW


Manual 2-stage fan speed regulation and output limitation in stages 0-1/2-1/1 via control panel PP20 and external thermostat. Slave connection. Timer connection.




Panther 20 kW

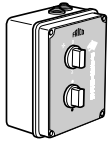


PP20, control panel

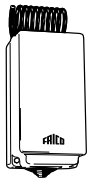



KRT1900, capillary tube thermostat

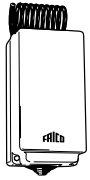

KRT2800 2-stage capillary tube thermostat

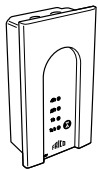


CBT, electronic time switch

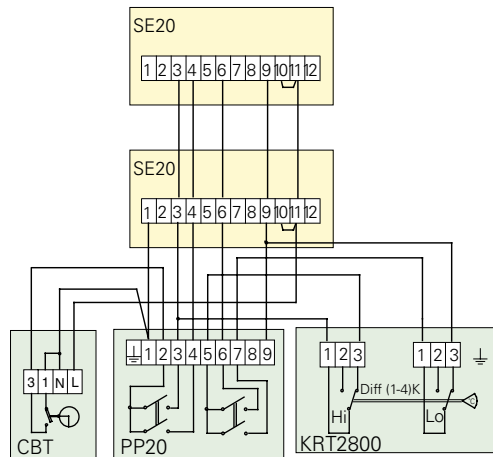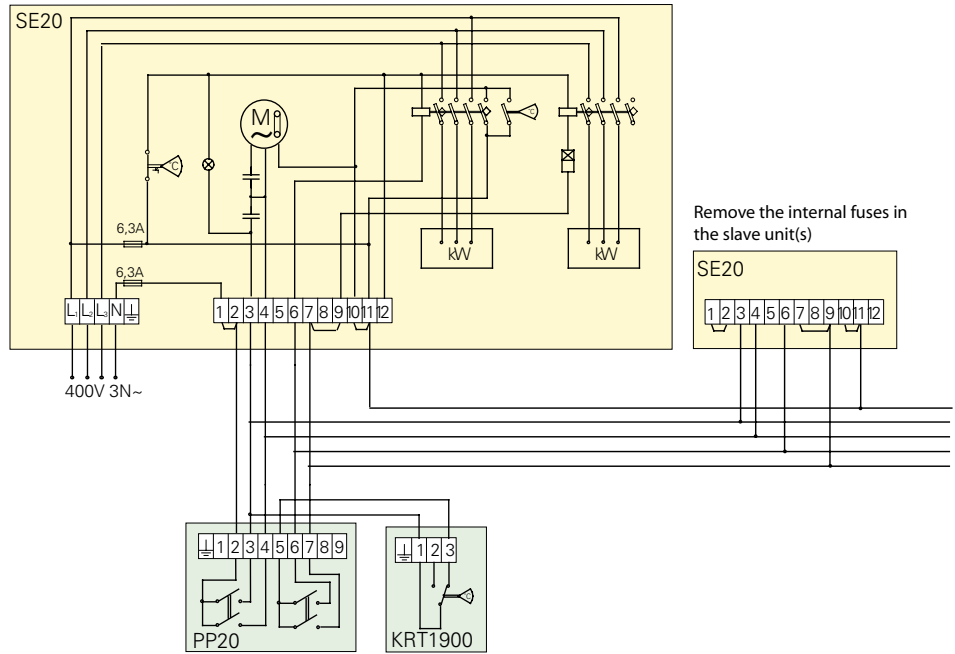

Wiring diagrams Panther 30 kW


Manual 2-stage fan speed regulation and output limitation in stages 0-1/3-2/3-1/1 via control panel PP30 and external thermostat. Slave connection. Timer connection.

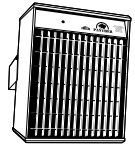


Panther 30 kW




PP30, control panel

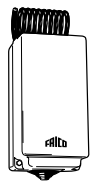

KRT1900, capillary tube thermostat

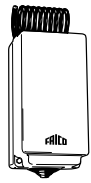

KRT2800 2-stage capillary tube thermostat

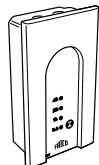

CBT, electronic time switch

